


# Solar Panel Roof Mount Kit Part Number 963

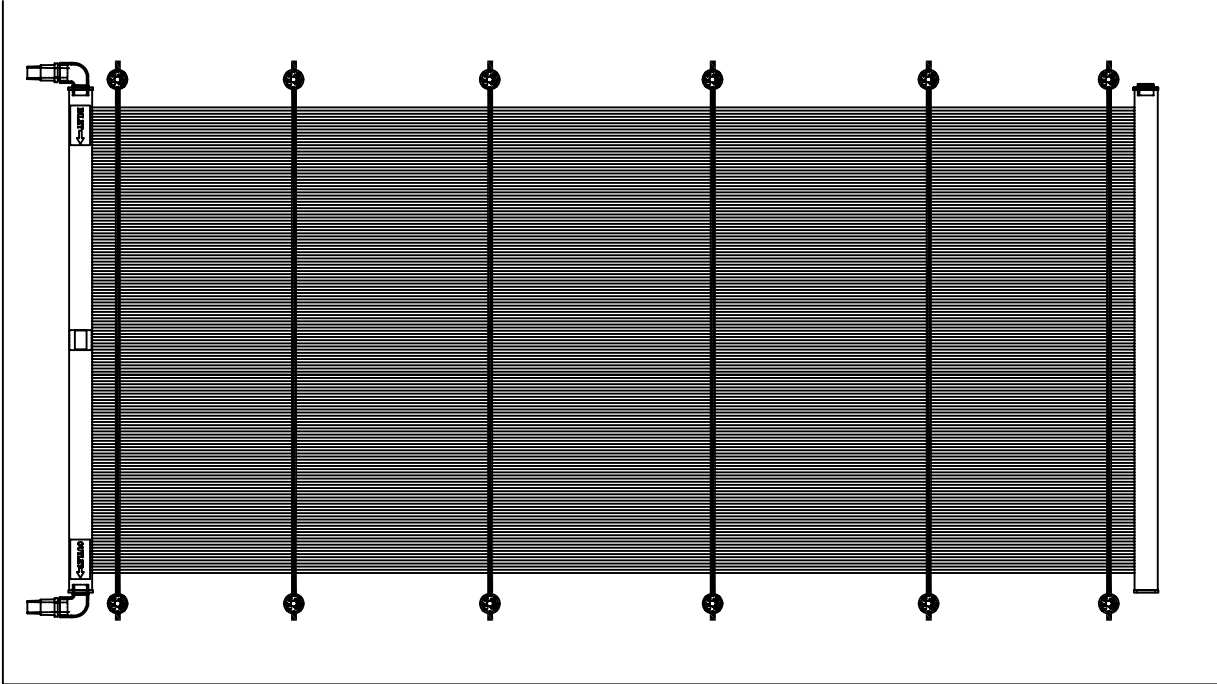

## CONTENTS:

QTY-12: TIE DOWN CAPS  
QTY-12: TIE DOWN BASES  
QTY-6: 62" L DACRON STRAPS  
QTY-12: ST/ST LAG SCREWS  
INSTRUCTION SHEET

## TOOLS NEEDED:

1/4" ELECTRIC DRILL  
1/8" DRILL BIT  
3/8" RACHET W/ SOCKET TO FIT LAG SCREW

\* PURCHASE LOCALLY: ROOF SEALANT (HENRY'S ROOF SEALER OR EQUIV)

## INSTRUCTIONS:

- 1.) MOUNT THE PANEL LENGTHWISE ALONG ROOF.
- 2.) DRILL 6 EVENLY SPACED 1/8" DIAMETER HOLES ON EACH SIDE OF THE PANEL. THEY MUST BE DRILLED INTO THE ROOF TRUSS.
- 3.) APPLY A BEAD OF SEALANT (\*) AROUND THE DEPRESSION IN THE BOTTOM OF THE TIE DOWN BASE AND INTO THE HOLE PRE-DRILLED FOR THE LAG SCREW.
- 4.) SECURE TIE DOWN BASES TO ROOF USING THE LAG SCREWS (\*).
- 5.) RUN THE STRAPS ACROSS THE PANEL AND SECURE WITH THE CAP. HAND TIGHTEN ONLY.
- 6.) AT THE END OF THE SEASON REMOVE THE CAPS AND STRAPS SO THAT THE PANEL CAN BE REMOVED AND STORED FOR THE WINTER. LEAVE THE BASES ATTACHED TO THE ROOF.